



USER MANUAL



Sensorless Brushless Speed Controller
for

1/18, 1/16 On Road Car, Off Road Truck and
Drift RC car

Declaration**Thanks for purchasing “Emotion Electronic Speed Controller (ESC).**

High power system for RC model can be very dangerous, so we strongly suggest you read this manual carefully. In that we have no control over the correct use, installation, application, or maintenance of our products, no liability shall be assumed nor accepted for any damages, losses or costs resulting from the use of the product. Any claims arising from the operating, failure of malfunctioning etc. will be denied. We assume no liability for personal injury, consequential damages resulting from our product or our workmanship. As far as is legally permitted, the obligation to compensation is limited to the invoice amount of the affected product.


Features

1. Specially designed for RC car, with excellent start-up, acceleration and linearity features.
2. Compatible with sensor-less brushless motor and with (Most sensord motor).
3. Use top quality electronic components to enhance the current endurance ability of the ESC.
4. 3 running modes (Forward/Backward mode, Forward/Reverse with brake, Forward/Reverse with out brake)
5. 4 steps of maximum reverse force adjustment.
6. Proportional ABS brake function with 4 steps of maximum brake force adjustment, 8 steps of drag-brake force adjustment and 4 steps of initial brake force adjustment.
7. DRRS “Digital Racing Respond System” (Also called “Punch”) from Level 1 “soft” to Level 9 “very aggressive”.
8. Multiple protection features: Low voltage cut-off protection for lithium or nickel battery / Over-heat protection / Throttle signal loss protection / Motor blocked protection.
9. 8 steps adjustment of “AMTS” -Advance Multi timing System design suitable for different brands of brushless motor with give you the best performance for both the ESC and motor.
10. Waterproof and dustproof.
11. Easily program with only one button and compatible with pocket-sized SMART ESC program card.

Specifications

Model	Emotion-ESC
Cont. Current	20A
Burst Current	100A
Resistance	0.005 ohm
Suitable Car	Car, Rock Crawler, 2WD Off Road
Suitable Brushless Motor	> (10,000 brushless motor)
Battery	4-9 Cell Ni-xx (NiMh or NiCd) or 2-3 Cell Li-Po 1) For 4-6 Cell Ni-xx: You needn't change the fan combined with the ESC; 2) For 7-9 Cell Ni-xx: You must change the fan combined with the controller because it cannot work with such a high voltage, so please choose a high voltage fan or supply the fan from the receiver (+5V); (*Note1)
BEC Output	6V/1.5A
Motor Type	Sensor less Brushless Motor
Dimension	31.5mm* 27.5mm* 24mm (The height of fan is not included)
Weight	15g(Without wires)

Note1: For information about the high voltage fan, please refer to the brief introduction on page 3.

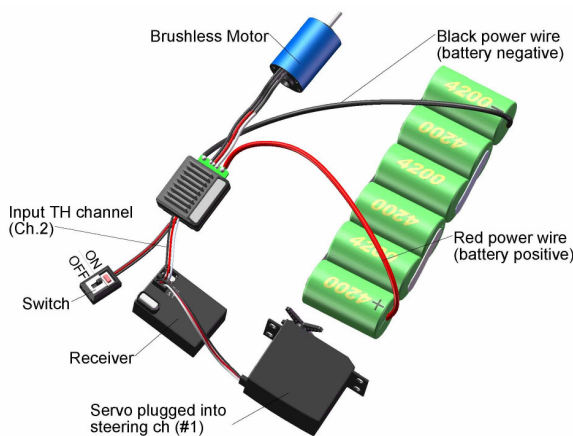Begin To Use The New ESC**1. Connect the ESC, motor, receiver, battery and servo according to the following diagram**

“+” And “-” wires on the ESC are connected with the battery pack, and #A, #B and #C are connected with the motor wires. The “SET” button is used for programming the ESC. The control cable of the ESC (trio wires with black, red and white color) is connected with the throttle channel of the receiver (Usually CH2).

The #A, #B, #C wires of the ESC can be connected with the motor wires freely (without any order). If the motor runs in the opposite direction, please swap any two-wire connections.

Note: You can use the transmitter to set the

throttle channel to the "Reverse" direction, and then the motor will run oppositely. Please calibrate the throttle range again after changing the direction of throttle channel.

2. Throttle Range Setting (Throttle Range Calibration)

In order to make the ESC fit the throttle range, you must calibrate it for the following cases; otherwise the ESC cannot work properly.

- 1) Begin to use a new ESC;
- 2) Begin to use a new transmitter;
- 3) Change the settings of neutral position of the throttle stick, ATV or EPA parameters, etc.

There are 3 points need to be set, they are the top point of "forward", "backward" and the neutral point.

The following pictures show how to set the throttle range with a Futaba™ transmitter.

3. The LED Status in Normal Running

- A) Switch off the ESC, turn on the transmitter, set the direction of throttle channel to "REV", set the "EPA/ATV" value of throttle channel to "100%".
- B) Hold the "SET" key and then switch on the ESC, release the "SET" key when the red LED begins to flash.

(Please refer to the picture on the right side)

- C) Set the 3 points according to the steps shown in the picture on the right side.

- 1) Neutral point
- 2) End point of forward direction
- 3) End point of backward direction

- D) When the process of calibration is finished, the motor can be started after 3 seconds.

- a) In normal use, if the throttle stick is in the neutral range, neither the red LED nor the green LED will light.

- b) The red LED lights when the car is run forward or backward and it will flash quickly when the car is braking.

- c) The green LED lights when the throttle stick is moved to the top point (end point) of the forward zone or

Move the throttle stick to the neutral position



Press "SET" key, the Green LED flashes once and motor emits "Beep" tone

Move the throttle stick to the end position of forward.



Press "SET" key, the Green LED flashes twice and motor emits "Beep-Beep" tone

Move the throttle stick to the end position of backward.



Press "SET" key, the Green LED flashes thrice and motor emits "Beep-Beep-Beep" tone

backward zone.

Alert Tones

1. Input voltage abnormal alert tone: The ESC begins to check the input voltage when power on, if it is out of the normal range, such an alert tone will be emitted: "beep-beep-, beep-beep-, beep-beep-" (There is 1 second time interval between every "beep-beep-" tone).
2. Throttle signal abnormal alert tone: When the ESC can't detect the normal throttle signal, such an alert tone will be emitted: "beep-, beep-, beep-" (There is 2 seconds time interval between every "beep-" tone).

Protection Function


1. Low voltage cut-off protection: If the voltage of a lithium battery pack is lower than the threshold for 2 seconds, the ESC will cut of the output power. Please note that the ESC cannot be restarted if the voltage of each lithium cell is lower than 3.5V.
For NiMh/NiCd battery packs, if the voltage of the whole NiMh/NiCd battery pack is higher than 9.0V but lower than 12V, it will be considered as a 3-cell lithium battery pack; if it is lower than 9.0V, it will be considered as a 2-cell lithium battery pack. For example, if the NiMh battery pack is 8.0V, and the threshold is set to 2.6V/Cell, so it will be considered as a 2 cell lithium battery pack, and the low-voltage cut-off threshold for this NiMh battery pack is $2.6 \times 2 = 5.2V$.
2. Over-heat protection: When the temperature of the ESC is over 95 Celsius degrees for 5 seconds, the ESC will cut off the output power. You can disable the over-heat protection function for competition race.
3. Throttle signal loss protection: The ESC will cut off the output power if the throttle signal is lost for 0.2 second.


Trouble Shooting

Trouble	Possible Reason	Solution
After power on, motor can't work, no sound is emitted	The connections between battery pack and ESC are not correct	Check the power connections Replace the connectors
After power on, motor can't work, but emits “beep-beep-, beep-beep-” alert tone. (Every “beep-beep-” has a time interval of 1 second)	Input voltage is abnormal, too high or too low.	Check the voltage of the battery pack
After power on, motor can't work, but emits “beep-, beep-, beep-” alert tone. (Every “beep-” has a time interval of about 2 seconds)	Throttle signal is abnormal	Check the transmitter and the receiver Check the wire of the throttle channel
The motor runs in the opposite direction	The wire connections between ESC and the motor need to be changed	Swap any two-wire connections between the ESC and the motor.
The motor suddenly stops running while in working state	The throttle signal is lost	Check the transmitter and the receiver Check the wire of the throttle channel
	The ESC has entered the Low Voltage Protection Mode	Replace the battery pack
Random stop or restart or irregular working state	Some connections are not reliable	Check all the connections: battery pack connections, throttle signal wire, and motor connections, etc.
	There is strong Electro - Magnetic interference in flying field.	Reset the ESC to resume normal operation. If the function could not resume, you might need to move to another area to run the car.

1. Program card.

Program card is standard accessory, which came with the ESC. It has a friendly user interface. The process of programming the ESC becomes quite easy and fast with this pocket sized device. When the programmable value needs to be changed, please just plug the control wires of the ESC (trio wires with black, red and white color) into the socket of the program card (The socket is on the right corner, and marked with), and then connect the main battery pack to the ESC, each item's value will be shown on the program card. Use “ITEM” and “VALUE” buttons to select the programmable items and new values, and then press “OK” button to store the new settings into the ESC.

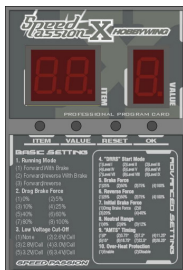**Program The ESC****1. Program Method**

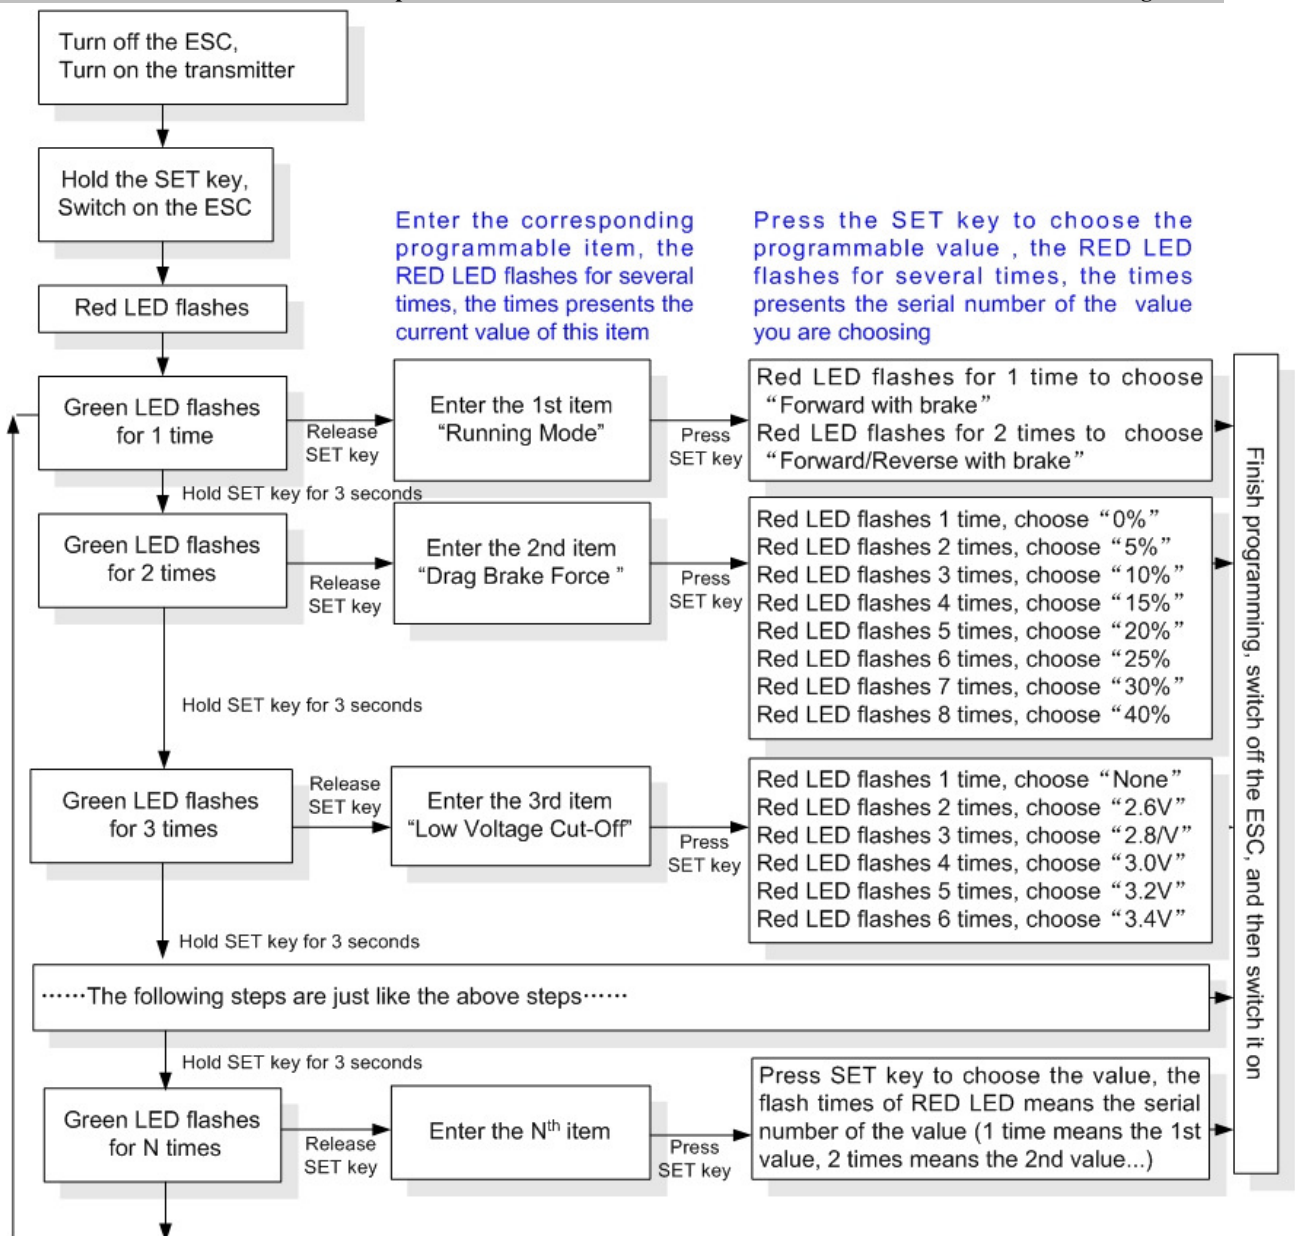

Note:

- ★ In the program process, the motor will emit “Beep” tone at the same time when the LED is flashing.
- ★ If the “N” is bigger than the number “5”, we use a long time flash and long “Beep---” tone to represent “5”, so it is easy to identify the items of the big number.

For example, if the LED flashes as the following:

“A long time flash + a short time flash” (Motor sounds “Beep---Beep”) = the No. 6 item

“A long time flash + 2 short time flash” (Motor sounds “Beep---Beep Beep”) = the No. 7 item

“A long time flash + 3 short time flash” (Motor sounds “Beep---BeepBeepBeep”) = the No. 8 item

...

And so on.

Programmable Items list

Programmable Items	Programmable Value							
	1	2	3	4	5	6	7	8
Basic Items								
1. Running Mode	Forward Only with Brake	<i>Forward/Reverse with Brake</i>	Forward/Reverse					
2. Drag Brake Force	0%	5%	10%	25%	40%	60%	80%	100%
3. Low Voltage Cut-Off Threshold	Non-Protection	2.6V/Cell	2.8V/Cell	3.0V/Cell	3.2V/Cell	3.4V/Cell		
4. Start Mode(Punch)	Soft	Normal	Aggressive	Very Aggressive				
Advanced Items								
5. Maximum Brake Force	25%	50%	75%	100%				
6. Maximum Reverse Force	25%	50%	75%	100%				
7. Initial Brake Force	= Drag Brake Force	0%	20%	40%				
8. Neutral Range	6% (Narrow)	9% (Normal)	12% (Wide)					
9. Timing (Only for sensorless motor)	0.00 □	3.75 □	7.50 □	11.25 □	15.00 □	18.75 □	22.50 □	26.25 □
10. Over-heat Protection	95 Degree	Non-Protection						

Attention: The italic texts in the above form are the default settings.

2. Programmable Values

2.1. **Running Mode:** With “Forward with Brake” mode, the car can go forward and brake, but cannot go backward, this mode is suitable for competition; “Forward/Reverse with Brake” mode provides backward function, which is suitable for training, also forward / Reverse which suitable for rock crawler

Note: “Forward/Reverse with Brake” mode uses “Double-Click” method to make the car go backward. When you move the throttle stick from forward zone to backward zone for the first time, the ESC begins to break the motor, the motor speeds down but it is still running, not completely stopped, so the backward action is NOT happened now. When the throttle stick is moved to the backward zone again (The 2nd “click”), if the motor speed is slowed down to zero (i.e. stopped), the backward action will be occurred. The “Double-Click” method can prevent mistakenly reverse when the brake function is frequently used in steering.

By the way, in the process of braking or reverse, if the throttle stick is moved to forward zone, the motor will regain forward running at once.

2.2. **Drag Brake Force:** Set the amount of drag brake applied at neutral throttle to simulate the slight braking effect of a neutral brushed motor while coasting.

2.3. **Low Voltage Cut-Off:** The function is mainly to prevent the lithium battery pack from over discharging. When using lithium battery pack, please set the suitable value for low-voltage protection as your like. **WARNING: Never use the default value “Non-protection” for lithium battery!**

2.4. The ESC monitors the battery’s voltage at any time, if the voltage is lower than the threshold, the output power will be cut off.

2.5. **DRRS Mode:** Select from “soft” to “very aggressive” start mode as you’re like. Please note that if you choose “Aggressive” or “Very Aggressive” mode, you’d better use good quality battery pack with powerful discharge ability, otherwise these 2 modes cannot get the bursting start effect as you want. If the motor cannot run smoothly (the motor is trembling), it may caused by the weak discharge ability of the battery pack, please choose a better battery or increase the gear rate.


2.6. **Maximum Brake Force:** The ESC provides proportional brake function. The brake force is related to the position of the throttle stick. Maximum brake force refers to the force when the throttle stick is located at the top point of the backward zone. A very large brake force can shorten the brake time, but it may damage the gears.

2.7. **Maximum Reverse Force:** Sets how much power will be applied in the reverse direction. Different value makes different reverse speed.

2.8. **Initial Brake Force:** It is also called “minimum brake force”, and it refers to the force when the throttle stick is located at the initial position of the backward zone. The default value is equal to the drag brake force, so the brake effect can be very smooth.

2.9. **Throttle Neutral Range:** Please see the following illustrations to adjust the neutral range as your like.

2.10. **AMTS:** There are many differences among structures and parameters of different brushless motors, so a fixed timing ESC is difficult to compatible with all brushless motors. It is necessary to make the timing value programmable. Please select the most suitable timing value according to the motor you are just using. Generally, higher timing value brings out higher power output, but the whole efficiency of the system will be slightly lower down.

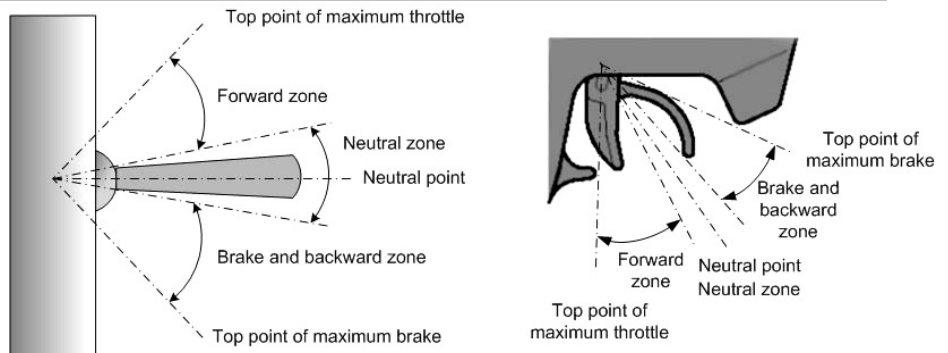

2.11. **Over-Heat Protection:** If the function is activated, the output power will be cut-off when the temperature of the ESC is up to 95-Celsius degrees for more than 5 seconds. When the protection happens, the Green LED will flash in such a way: "Flashes-----Flashes-----Flashes-----"

3. Reset All Items To Default Values

At any time when the throttle is located in neutral zone (except in the throttle calibration or parameters program process), hold the "SET" key for over 3 seconds, the red LED and green LED will flash at the same time, which means each programmable item has be reset to its default value.

Exemption Clause:

Speed Passion does not have control over the installation or use of this product therefore no liability for any damages incurred in its use will be accepted. Operation of this product is at the user's risk. The use of R/C models requires a degree of skill,

If you are a beginner please consult the advice of an experienced user to prevent injury to goods or other persons.

Caution:

Do not operate the ESC at voltages lower than 6V or higher the 14.8V battery, damage to the ESC can result.

When mounting the brushless motor in your car, pay careful attention to the length of the motor screws, they must not exceed 4.0mm in depth, longer than this and internal damage to the motor will result, which will void the product warranty.

Ensure all connections are secure before using this product.

Speed Passion reserves the right to modify the design, appearance and specification of the product without notice.

ESC Warranty period:

90 days limited warranty "Not including parts"

2 month return time for any repair or services

Limited 30 days warranty.

This product is guaranteed to be free from defects in materials or workmanship for a period of 30 days form the original date of purchase (Verified by sale receipt dated).

User accepts all resulting liability. We reserve the right to modify warranty provisions without notice.

Warranty does not cover incorrect installation, components worn by use, or any damage caused by crash, flooding or natural disaster.

The company has no control over the installation of this product, no liability may be assumed nor will be accepted for any damage resulting from the use of this product.



USER MANUAL



Sensorless Brushless Speed Controller
for
1/18, 1/16 On Road Car, Off Road Truck
and Drift RC car